
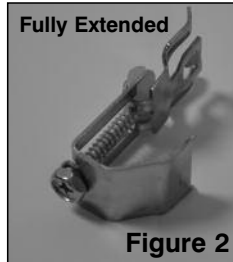


STEP 6

Remove Clips from carton and rotate to full open position as shown in **Figure 1 & 2**.

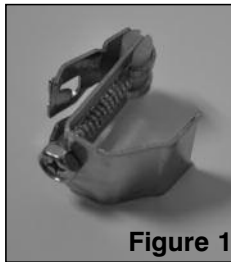

STEP 7

Align Clip with hole in Bracket (Underside of Sink) as shown in **Figures 3 & 4**. NOTE: Position Clip so adjusting screw faces the sink bowl. Push down on Clip until it "snaps" into place. Repeat for all clips.



STEP 8

While pulling on retaining clamp pivot towards inside of Sink Bowl (**Figure 5 & 6**).



STEP 9

Apply 1/4" bead sealant along edge of cut out (**Figure 7**) and install sink into counter top.



Pivot retaining clamp to align with under side of countertop and secure by tightening screws.

DO NOT OVERTIGHTEN!

Wipe excess Silicone from counter surface.

STEP 10

Connect Drain and Faucet supply lines. Test all connections for leaks.



Edgewood, New York 11717-8380

AUGUST 2011



INSTALLATION INSTRUCTIONS for DI-1-1515 DROP-IN SINK



**CHECK FOR CONCEALED DAMAGE
FILE CLAIM WITH FREIGHT CARRIER**

Drop-ins manufactured by **ADVANCE TABCO** are designed and constructed for countertop installations. Only one compartment units intended for HAND SINK USE are NSF listed and approved. Suggested end use for drop-in sinks include dump sinks, bar sinks, wash sinks and hand sinks.

CONTENTS INCLUDE:

- 1 ea. Sink Bowl
- Basket Type Drain
- Faucet
- Mounting Clips

TOOLS REQUIRED:

- Drill Motor
- 1/4" - 1/2" Drill Bits
- Long Shank Screw Driver
- Ruler or Tape Measure
- Pencil
- Adjustable Wrenches (2)
- Pipe Wrench
- Saber Saw or Jig Saw

MATERIAL REQUIRED:

- Silicone Sealant
- Plumbers Putty
- Masking Tape

RECOMMENDED

SAFETY MATERIALS:

- Safety Glasses
- Work Gloves

NOTE:

The corners of ALL Cutouts are to have a **1-1/4"** Radius.

STEP 1

Remove all contents from carton.

(NOTE: Check for concealed damage - Notify Carrier of any damages immediately)

STEP 2

- Position sink (upside down) onto counter top surface at desired location. Trace outer edge of Self-Rim with pencil.

(NOTE: Ensure sink is parallel to counter edges.)



← **CORRECT MARKING PROCEDURE**

Pencil MUST be held straight as possible.

INCORRECT >> MARKING PROCEDURE




- Remove sink and draw a second line 3/8" parallel to the **inside** of the marked line - that will be the **CUT** line (As shown). Cut out opening is 14 1/4" x 14 1/4"

- **NOTE: Double check ALL dimensions prior to cutting opening.**

REMEMBER:

MEASURE TWICE, CUT ONCE!

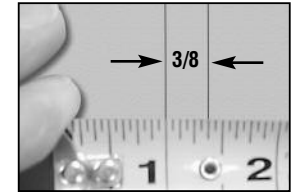


- Drill 1/4" hole 1 to the inside of cut line then use 1/2" drill bit to enlarge hole.
- Apply masking tape along outer (sink edge) line. This will prevent damaging countertop while cutting.
- Position jig saw blade into 1/2" hole and follow **(INNER)** LINE.

STEP 3

- Install Drain - Apply a bead of Plumber's Putty as shown.




1/4" continuous bead of Plumber's Putty.

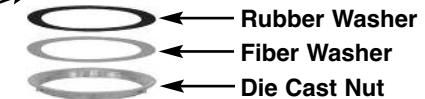

STEP 4

- Install Faucet (as shown).

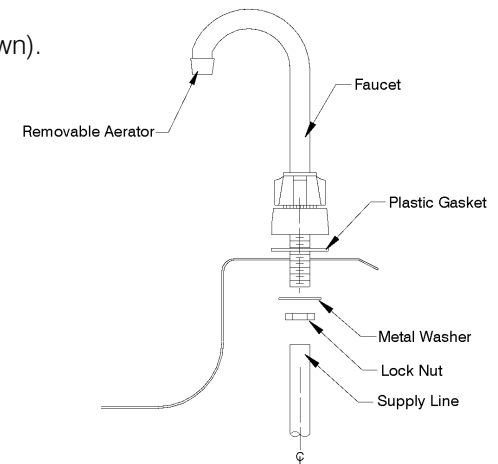

STEP 5

- Remove masking tape from counter surface and position sink into opening to ensure proper fit.