


STEP 7

Position Pedestal onto Base Shelf and secure with (4) 1/4" x 20 1/2" Truss Head Screws and Nuts provided. (See Illustration 5 & 5A)



Illustration 5

Illustration 5A

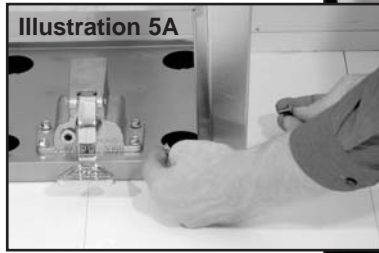

STEP 8

Install faucet, drain and drain to sink body.

STEP 9

Position Hand sink Body onto Pedestal and secure with (4) 1/4" x 1/2" Truss Head Screws and Nuts provided. (See Illustrations 6 & 6A)

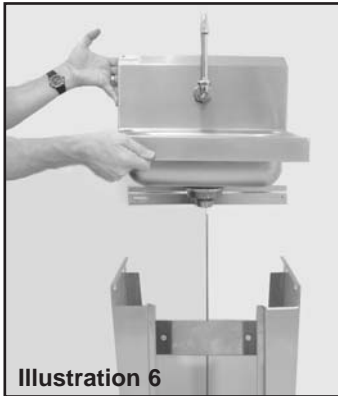


Illustration 6



Illustration 6A

STEP 10

If required, Remove "Break-Away" tabs at bottom of sides using metal shears to accommodate floor moulding. (See Illustrations 7 & 7A)



Illustration 7A



Illustration 7

STEP 11

Secure rear brace to wall. (See illustration 8)



Illustration 8

STEP 12

Connect drain and supply line from Foot Valve to Faucet.

STEP 13

Remove aerator and flush water system.

STEP 14

Adjust hot water at front of Foot Valve. (See Illustration 9)

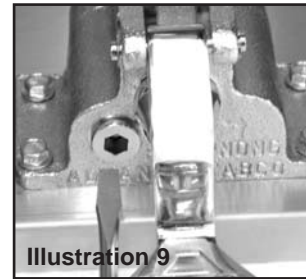


Illustration 9

STEP 15

Check all water and drain connections for leaks.

STEP 16

Install Front panel to Pedestal. (See Illustrations 10 & 10A)



Illustration 10



Illustration 10A

© ADVANCE TABCO, NOVEMBER 2002



INSTALLATION INSTRUCTIONS for PEDESTAL HAND SINKS



**CHECK FOR CONCEALED DAMAGE
FILE CLAIM WITH DELIVERING FREIGHT CARRIER**

Sinks manufactured by **ADVANCE TABCO®** are designed and constructed for the use of liquid containment. Suggested applications include Food Preparation, Manufacturing, Cooking, Laboratory and Service and the like. **ADVANCE TABCO®** does not recommend product use for activities employing harsh and active chemicals. Please consult factory regarding unusual applications.

CONTENTS INCLUDE:

- (1) Hand Sink with Pedestal
- (1) Foot Valve
- (1) Floor Template
- (4) 1/4 - 20 x 3/4" Hex Head Bolts
- (8) 1/4 - 20 x 1/2" Truss Head Screws
- (8) 1/4 - 20 Hex Nuts
- (1) K-121 Faucet
- (1) K-6 Basket Drain
- (1) Wall Clip

TOOLS REQUIRED:

- Tape Measure
- Flat Head Screw Driver
- 7/16" Open End Wrench
- 3/8" Open End Wrench
- Adjustable Wrench
- Drill Motor & Bits
- 48" Level
- Adhesive Tape
- Safety Glasses

INSTRUCTIONS:

STEP 1

Position Floor Template at desired location. Tape in place and drill holes as required for mounting hardware (Not Included). (See Illustration 1)

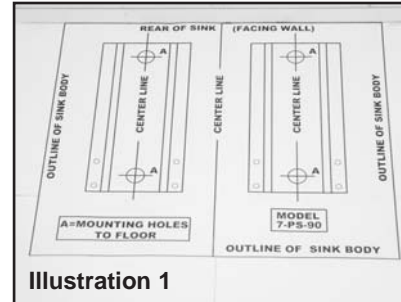


Illustration 1

STEP 2

Mark a "plumb" line from the centerline of the Floor Template extending approximately 48" A.F.F. (Above Finished Floor). Center Wall Clip on plumb line at a point 41-1/2" A.F.F. level and secure Wall Clip (Hardware not Included). (See Illustration 2)

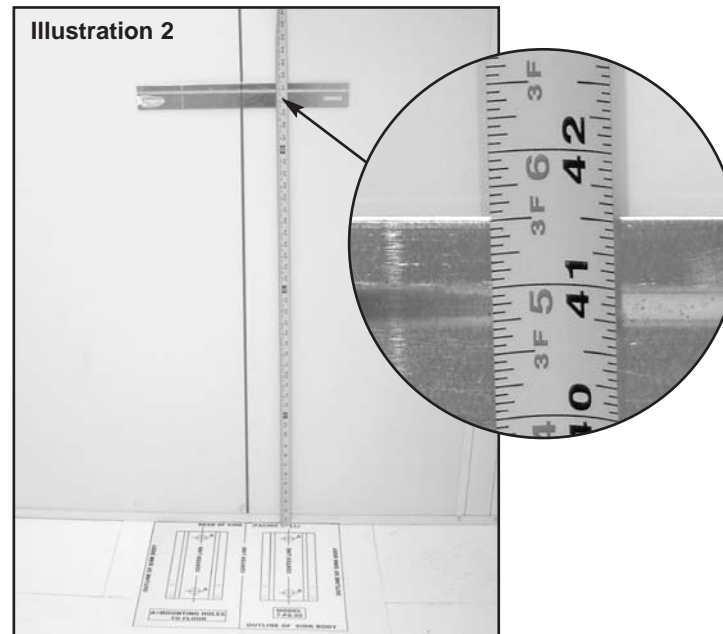


Illustration 2

STEP 3

Disassemble Pedestal Base - unbolt sink body from Pedestal. Remove Front Door Panel and disconnect Foot Valve & Base Shelf.

STEP 4

Install Base Shelf to Floor. (See Illustration 3)

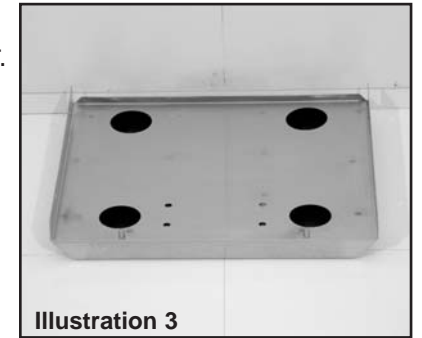


Illustration 3

STEP 5

Position and Secure Foot Valve to Base Shelf with (4) 1/4 - 20 x 3/4" Hex Head Bolts provided. (See Illustration 4)

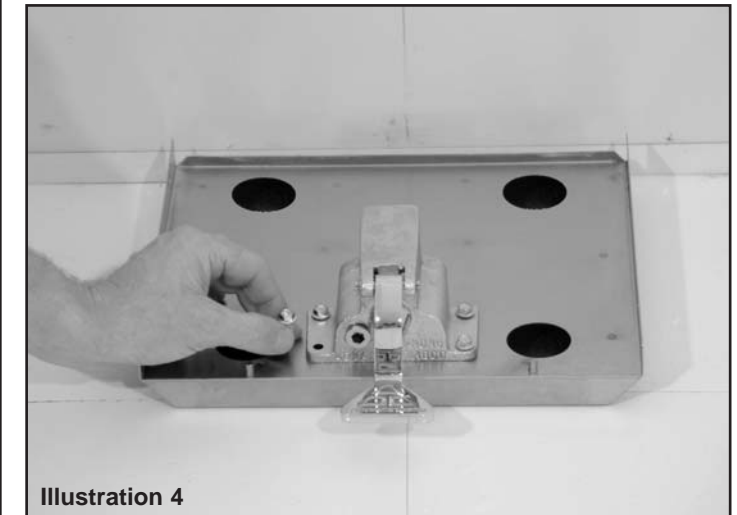


Illustration 4

STEP 6

Pre plumb hot and cold water supply to foot valve in accordance with local plumbing codes.